

ifm electronic



Operating instructions
Magnetic-inductive flow sensor

efector300[®]


SM6004

SM7004

SM8004

UK

80003223 / 00 05 / 2014

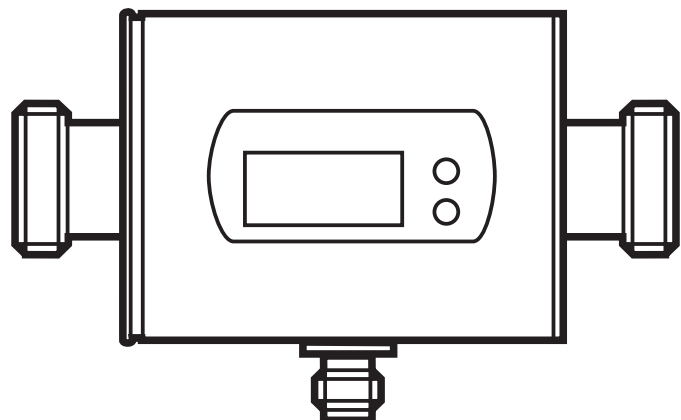


Contents

1 Preliminary note	3
1.1 Symbols used	3
2 Safety instructions	4
3 Functions and features	5
4 Function	5
4.1 Processing of the measured signals.....	5
4.2 Volumetric flow monitoring.....	5
4.3 Monitoring of temperatures.....	5
4.4 Volumetric flow or temperature monitoring / analogue function	6
5 Installation.....	6
5.1 Installation location	6
5.2 Installation in pipes	9
6 Electrical connection.....	10
7 Operating and display elements	11
8 Menu.....	12
8.1 Menu structure.....	12
8.2 Explanation of the menu.....	13
9 Parameter setting	14
9.1 General parameter setting.....	14
9.2 Scaling of the analogue value for temperature.....	16
9.3 Scaling of the analogue value for volumetric flow	16
9.4 User settings (optional).....	16
9.4.1 Determine the standard unit of measurement for volumetric flow	16
9.4.2 Determine the standard unit of measurement for temperature.....	16
9.4.3 Configuration of the standard display	16
9.4.4 Setting the damping of the measured values	16
9.4.5 Setting the error behaviour of OUT1 / OUT2.....	17
9.5 Service functions	17
9.5.1 Reading the min./max. values for volumetric flow	17
9.5.2 Reading the min./max. values for temperature.....	17
9.5.3 Reset all parameters to the factory setting	17
10 Operation.....	18

10.1 Read the set parameters	18
10.2 Changing the display unit in the Run mode	18
10.3 Error indication	19
11 Technical data and scale drawing	19
12 Factory setting	19

1 Preliminary note

1.1 Symbols used

- ▶ Instruction
- > Reaction, result
- [...] Designation of buttons, switches or indications
- Cross-reference
-  Important note
Non-compliance can result in malfunctions or interference.

2 Safety instructions

- Please read this document prior to installing the unit. Ensure that the product is suitable for your application without any restrictions.
- Improper or non-intended use may lead to malfunctions of the unit or to unwanted effects in your application. That is why installation, electrical connection, set-up, operation and maintenance of the unit must be carried out by qualified personnel authorised by the plant operator.
- In all applications test the compatibility of the product materials (→ 11 Technical data and scale drawing) with the media to be measured.
- In order to guarantee the correct condition of the device for the operating time it is necessary to use the device only for media to which the wetted materials are sufficiently resistant (→ Technical data).
- The responsibility whether the measurement devices are suitable for the respective application lies with the operator. The manufacturer assumes no liability for consequences of misuse by the operator. Improper installation and use of the measurement devices results in a loss of the warranty claims.

CAUTION

For medium temperatures above 50 °C some parts of the housing can heat up to over 65 °C.

- ▶ In this case do not touch the unit.
- ▶ Protect the housing against contact with flammable substances and unintentional contact.
- ▶ Do not press the pushbuttons manually; instead use another object (e.g. ballpoint pen).

3 Functions and features

The unit monitors liquids.

It detects the process categories volumetric flow and medium temperature.

Application area

Conductive liquids with the following properties:

- conductivity: $\geq 20 \mu\text{S}/\text{cm}$
- viscosity: $< 70 \text{ mm}^2/\text{s}$ at $40 \text{ }^\circ\text{C}$ ($< 70 \text{ cSt}$ at $104 \text{ }^\circ\text{F}$).

4 Function

4.1 Processing of the measured signals

- The unit displays the current process values.
- It generates 2 output signals according to the parameter setting.
 - OUT1: analogue signal for temperature.
 - OUT2: analogue signal for volumetric flow.

4.2 Volumetric flow monitoring

The medium flows through a magnetic field. It generates a signal voltage which is directly proportional to the volumetric flow.

- An analogue signal proportional to the volumetric flow (4...20 mA) is provided on output 2. For the analogue functions → 4.4.

In addition to the flow velocity, the unit also detects the flow direction. The positive flow direction is marked on the unit by an arrow (“flow direction” → 5.2).

- Flow = “flow direction”: process value and display positive.
- Flow against the “flow direction”: process value and display negative.

Only positive process values are processed for the signal output..


4.3 Monitoring of temperatures

- An analogue signal proportional to the temperature (4...20 mA) is provided on output 1. For the analogue functions → 4.4.

4.4 Volumetric flow or temperature monitoring / analogue function

- The analogue start point [ASP] determines at which measured value the output signal is 4 mA.
- The analogue end point [AEP] determines at which measured value the output signal is 20 mA.
- Minimum distance between [ASP] and [AEP] = 20 % of the final value of the measuring range.

Example volumetric flow monitoring

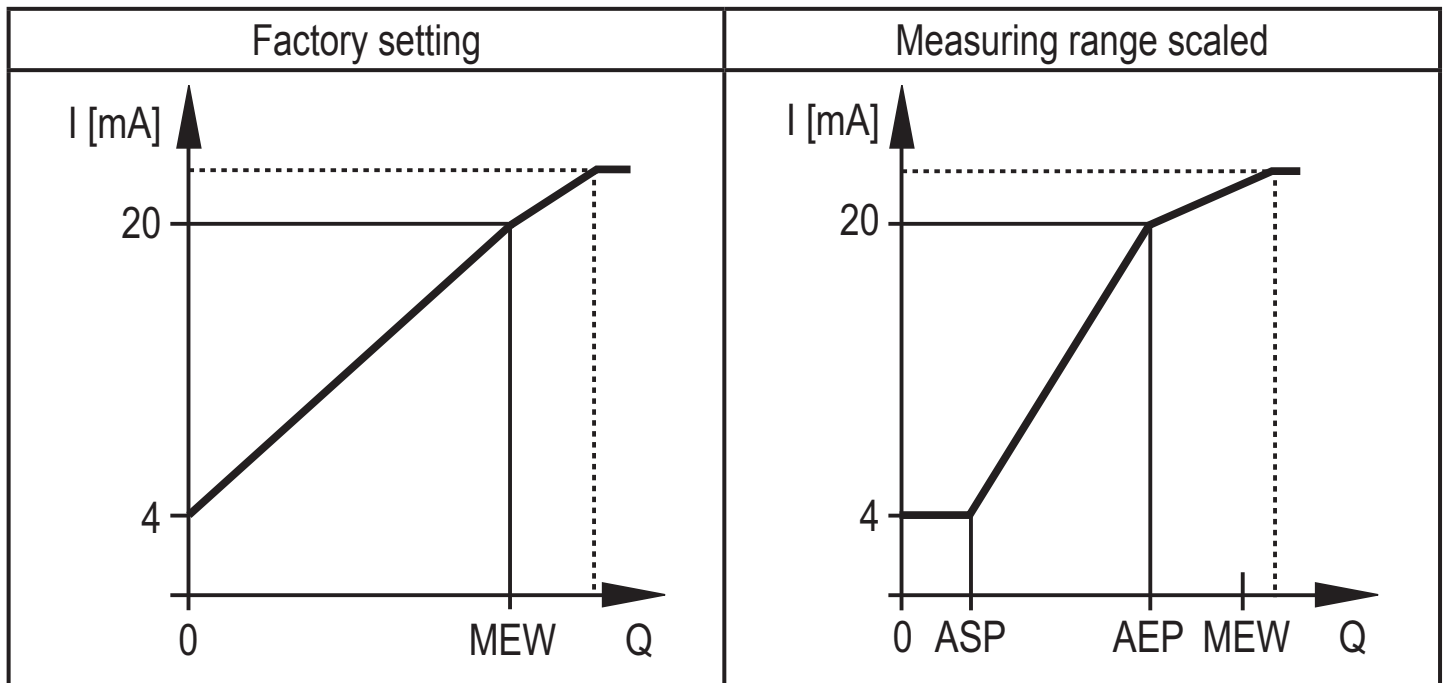

MEW = final value of the measuring range

In the set measuring range the output signal is between 4 and 20 mA.


It is also indicated:

Volumetric flow above the measuring range: output signal > 20 mA.

5 Installation


5.1 Installation location

- ▶ Install the unit so that the measuring pipe is always completely filled.
- ▶ Arrange for inlet and outlet pipe lengths. Disturbances caused by bends, valves, reductions, etc. are compensated for. It applies in particular: no shut-off and control devices are allowed directly in front of the unit.

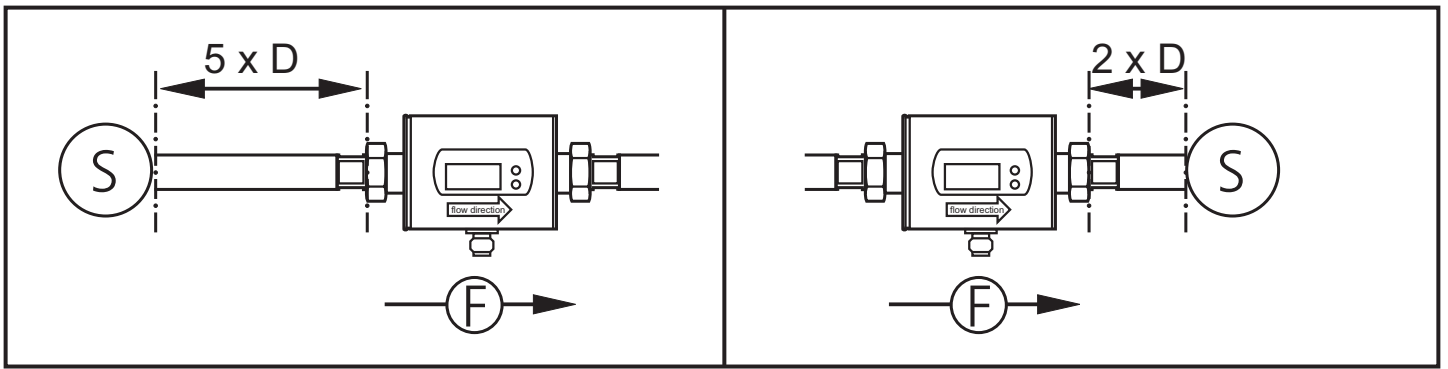

S = disturbance; D = pipe diameter; F = flow direction

► Install in front of or in a rising pipe.

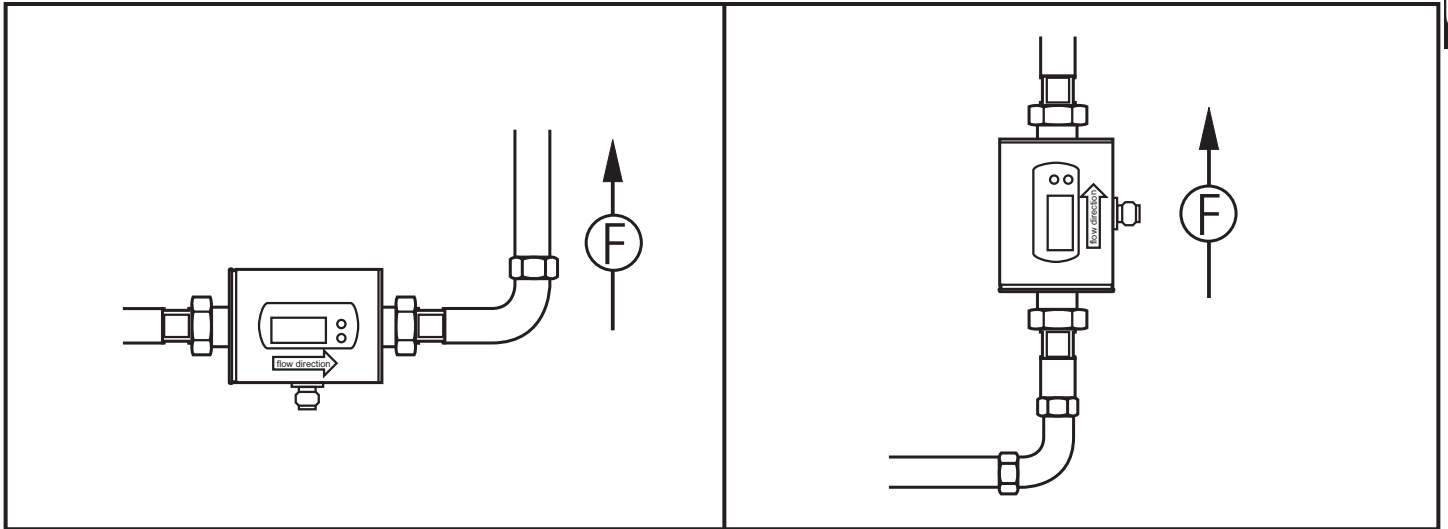


UK

F = flow direction


► Avoid the following installation locations:

- Directly in front of a falling pipe.
- In a falling pipe.

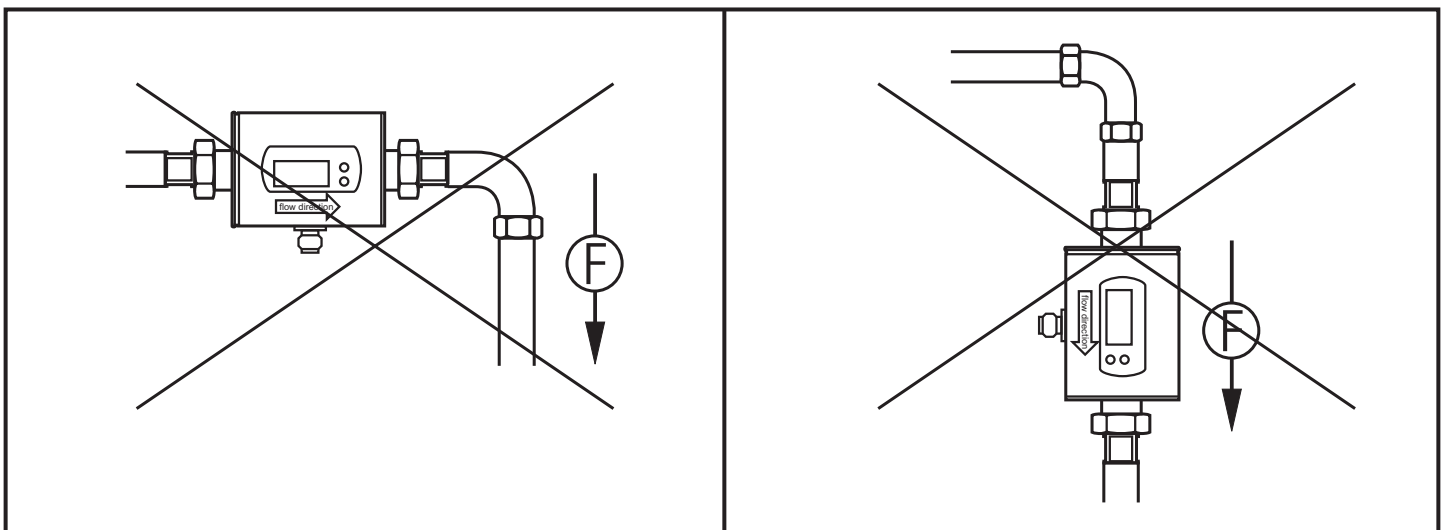

F = flow direction


- At the highest point of the pipe system.
- Directly in front of the spout of a pipe.

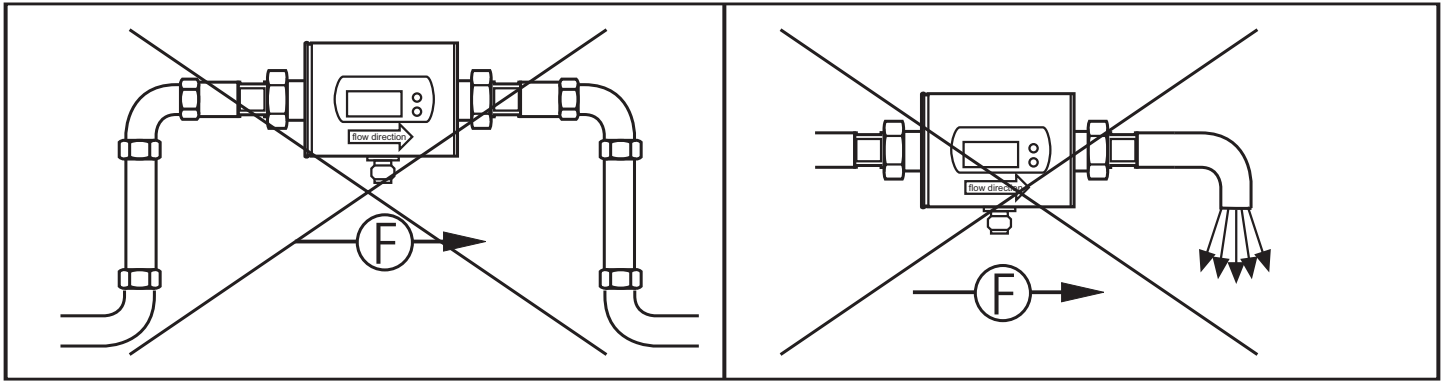

F = flow direction

The unit can be installed independently of the orientation if the following is ensured:


- No air bubbles can form in the pipe system.
- The pipes are always completely filled.
- On the suction side of a pump.

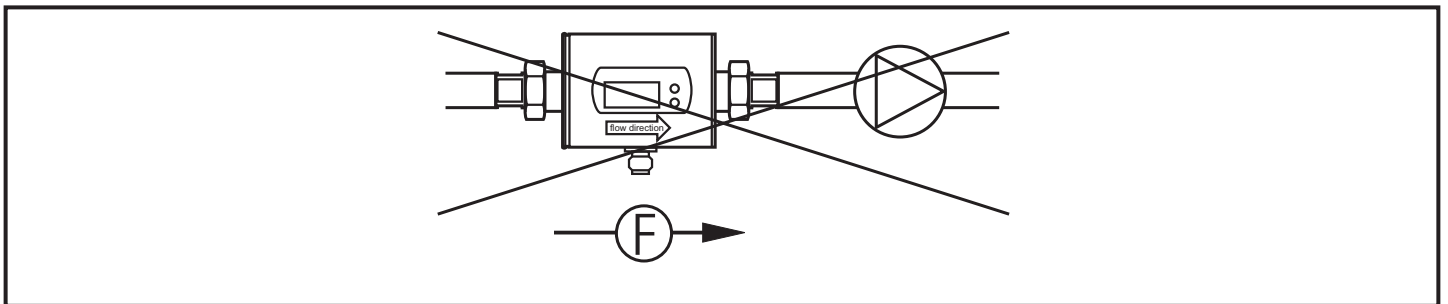

F = flow direction



If installed in an ungrounded pipe system (e.g. plastic pipes) the unit must be grounded.

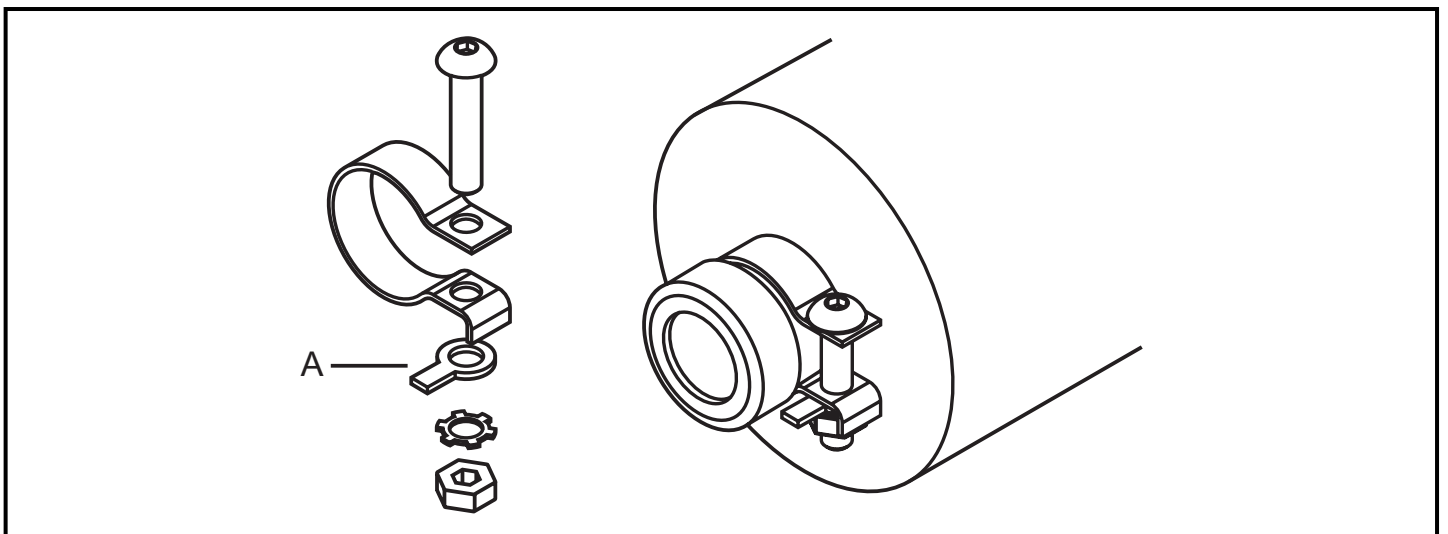


Ground brackets for the thread are available as accessories.

A = cable lug (not included in the scope of supply).

5.2 Installation in pipes

The unit is installed in the pipe using adapters. Adapters have to be ordered separately as accessories.

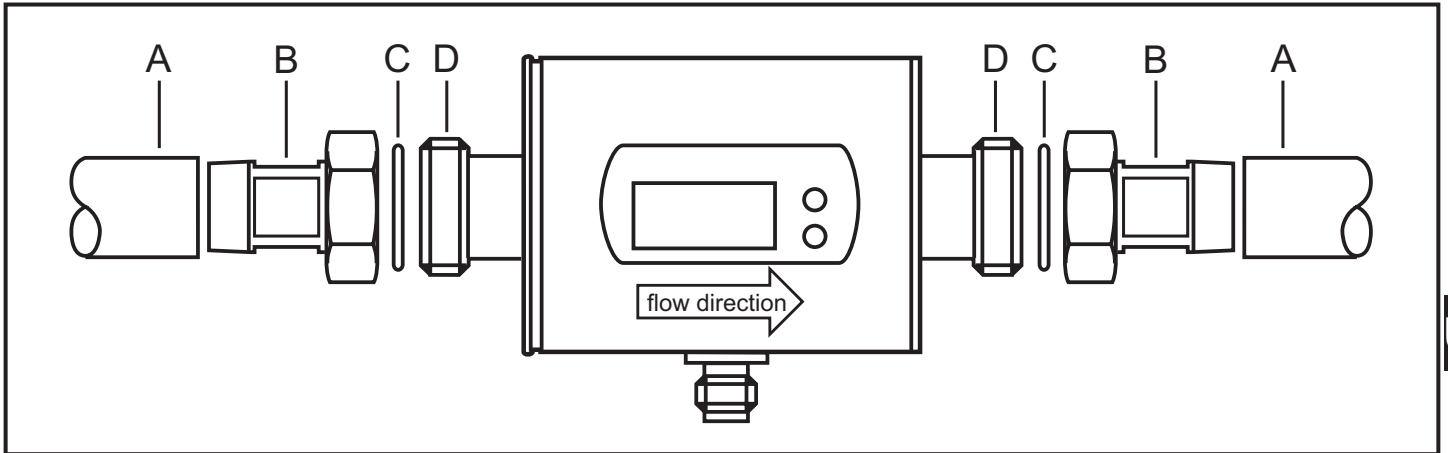


1. Screw the adapter (B) into the pipe (A).
2. Place the seals (C) and install the unit according to the marked flow direction.
3. Screw the adapter (B) with the threads (D) until it is hand-tight.
4. Tighten the two adapters in opposite direction (tightening torque: 30 Nm).

For SM6004:

The unit can also be used in G³/₄ fittings.

- ▶ To do so, first screw an adapter G¹/₂ - G³/₄ (B) with O-ring (C) on both threads (D) of the unit.
- ▶ Place the seals (A) and install the unit according to the marked flow direction.

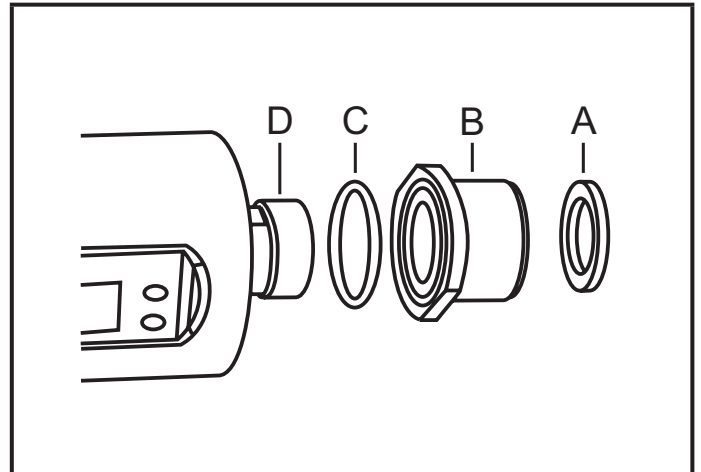

After installation air bubbles in the system can affect the measurement. Help:

- ▶ Rinse the system after installation for ventilation (rinsing quantity > 3 l/min. / 1 gpm).

In cases of horizontal installation: As a result of design requirements a small quantity of the medium always remains in the measuring channel after switching off the pump.



6 Electrical connection




The unit must be connected by a qualified electrician.

The national and international regulations for the installation of electrical equipment must be adhered to.


Voltage supply to EN 50178, SELV, PELV.

- ▶ Disconnect power.
- ▶ Connect the unit as follows:

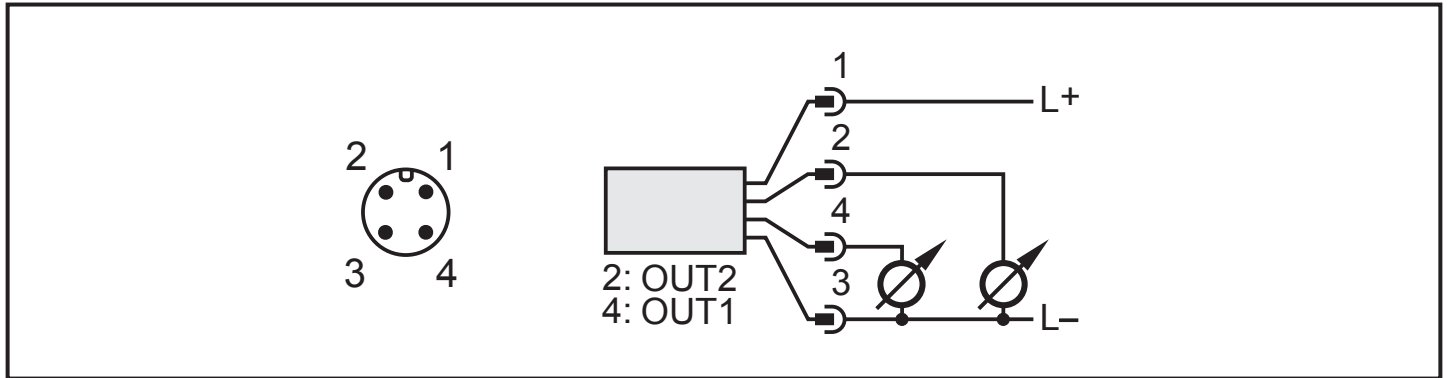

Pin1	Ub+
Pin3	Ub-
Pin4 (OUT1)	Analogue signal for temperature.
Pin2 (OUT2)	Analogue signal for volumetric flow.

7 Operating and display elements

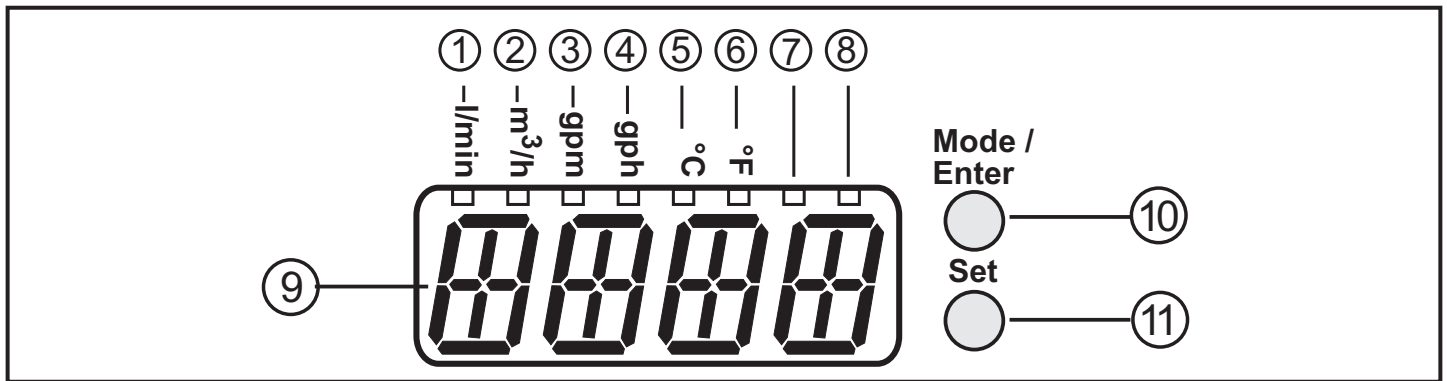

1 to 8: Indicator LEDs

- LED 1 = current volumetric flow in litres/minute.
- LED 2 = current volumetric flow in cubic metres/hour.
- LED 3 = current volumetric flow in gallons per minute (gpm).
- LED 4 = current volumetric flow in gallons per hour (gph).
- LED 5 = current medium temperature in °C.
- LED 6 = current medium temperature in °F.
- LED 7, LED 8 = not used.

9: Alphanumeric display, 4 digits

- Indication of the current volumetric flow (if [SELd] = [FLOW] is set).
- indication of the current medium temperature (if [SELd] = [TEMP] is set).
- indication of the parameters and parameter values.

10: Mode/Enter pushbutton

- Selection of the parameters and acknowledgement of the parameter values.


11: Set pushbutton

- Setting of the parameter values (scrolling by holding pressed, incremental by pressing briefly).
- Change of the display unit in the normal operating mode (Run mode).

UK

8 Menu

8.1 Menu structure

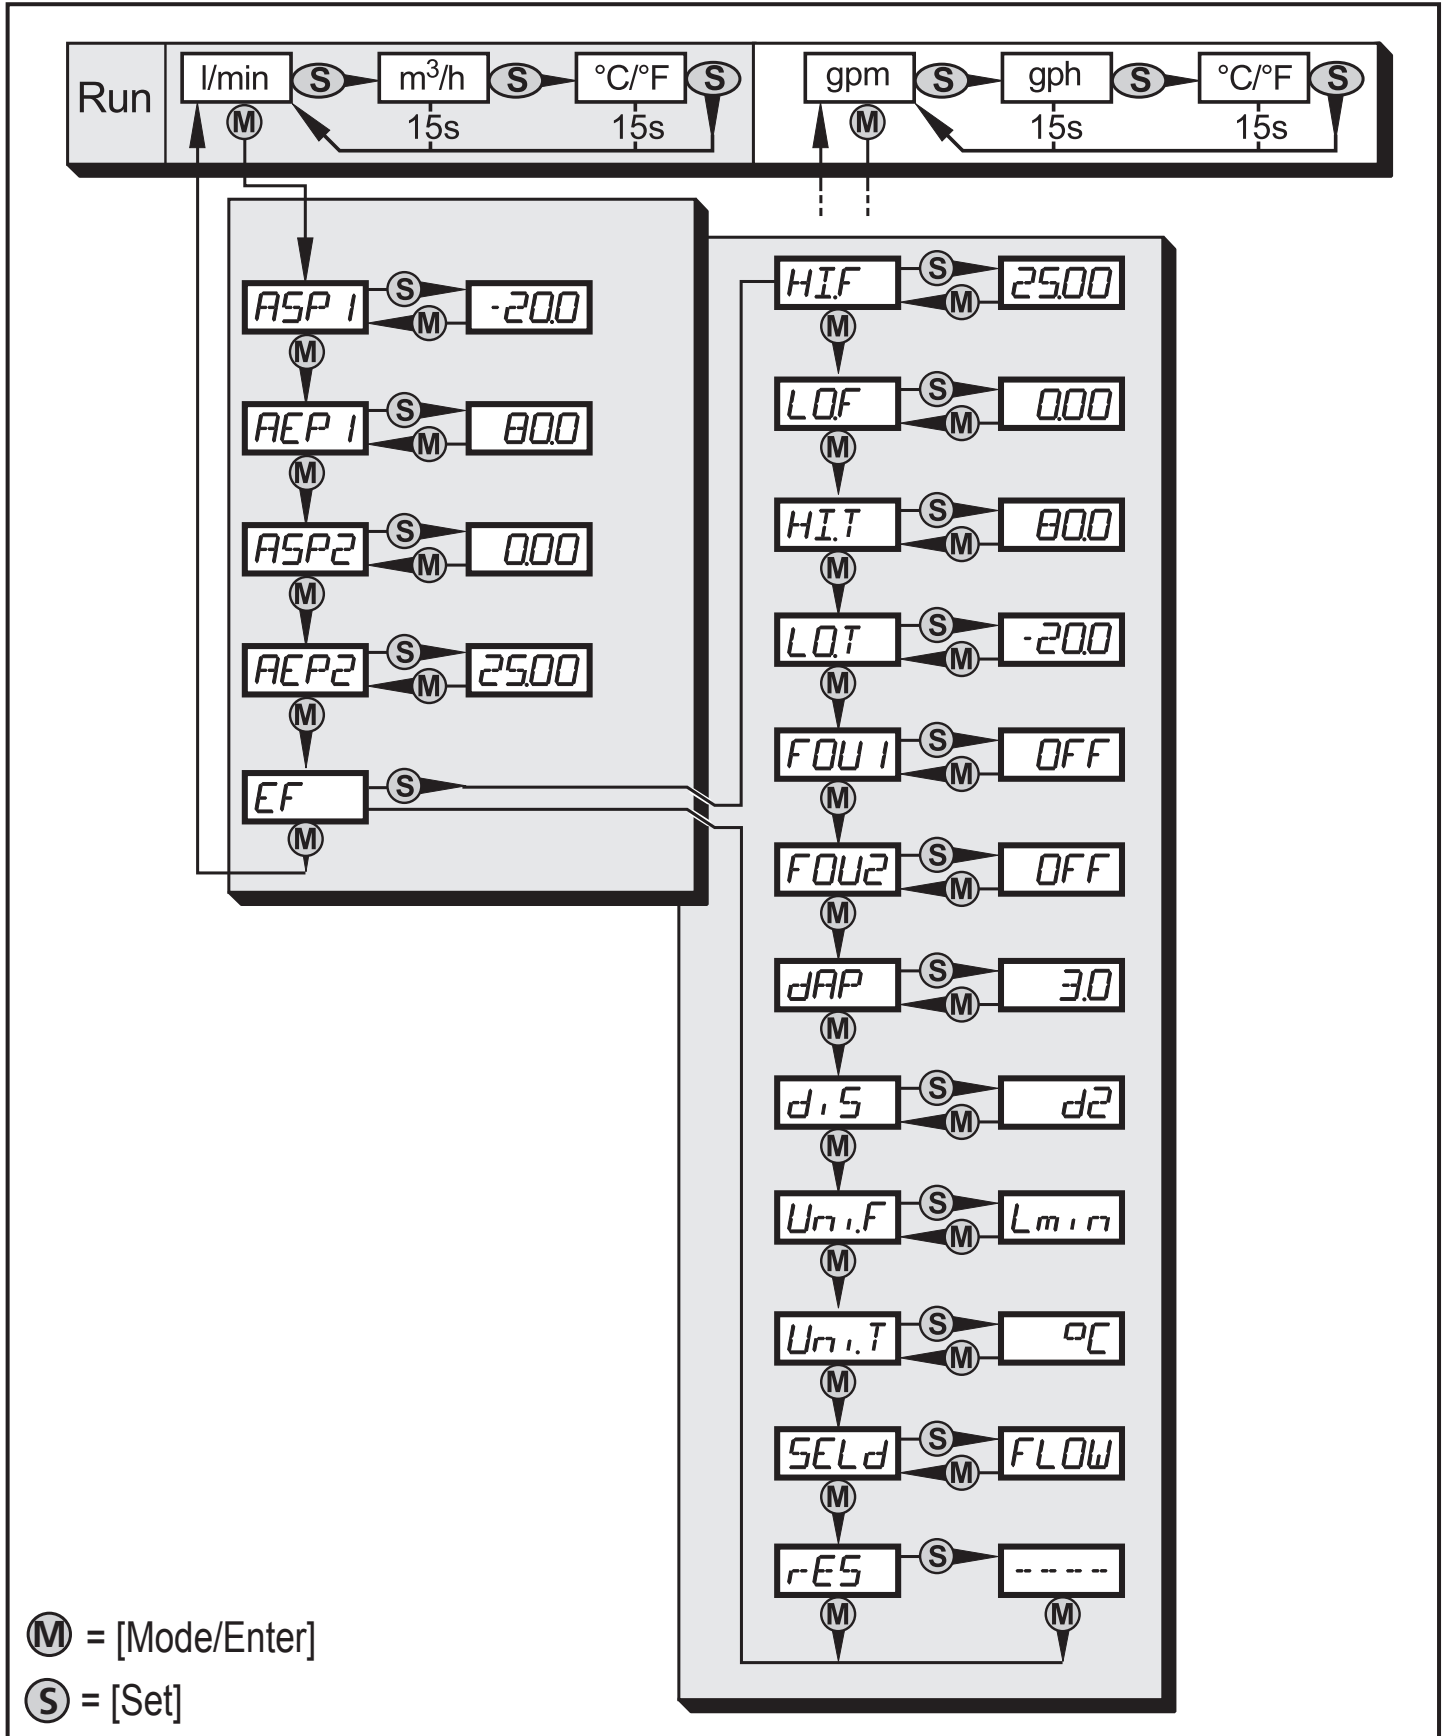

In the Run mode, different display units are accessible (depending on the setting of the parameters [SELd], [Uni.F] and [Uni.T], → 10.2).

8.2 Explanation of the menu

ASP1	Analogue start value for temperature.
AEP1	Analogue end value for temperature.
ASP2	Analogue start value for volumetric flow.
AEP2	Analogue end value for volumetric flow.
EF	Extended functions / opening of menu level 2.
HI.F	Maximum value memory for volumetric flow.
LO.F	Minimum value memory for volumetric flow.
HI.T	Maximum value memory for temperature.
LO.T	Minimum value memory for temperature.
FOU1	Behaviour of output 1 in case of an internal fault.
FOU2	Behaviour of output 2 in case of an internal fault.
dAP	Measured value damping / damping constant in seconds.
diS	Update rate and orientation of the display.
Uni.F	Standard unit of measurement for volumetric flow: litres/minute (lmin), cubic metres/hour (m ³ h), gallons per minute (gpm) or gallons per hour (gph).
Uni.T	Standard unit of measurement for temperature: °C or °F.
SELd	Standard process category of the display: volumetric flow value or medium temperature.
res	Restore factory setting.




UK

9 Parameter setting



During parameter setting the unit remains in the operating mode. It continues its monitoring function with the existing parameters until the parameter setting has been completed.

9.1 General parameter setting

3 steps must be taken for each parameter set:
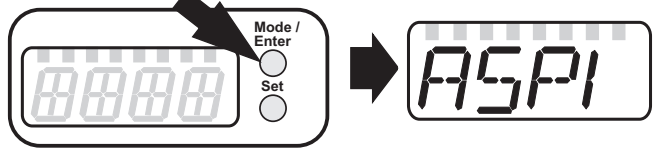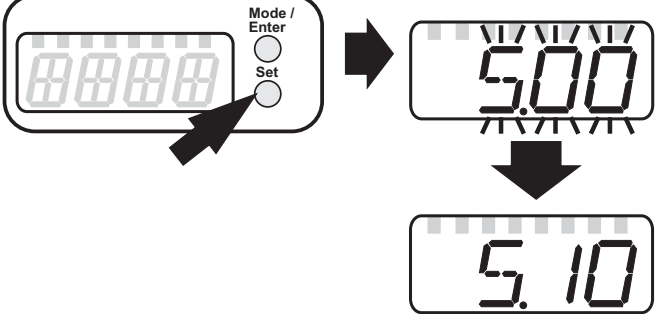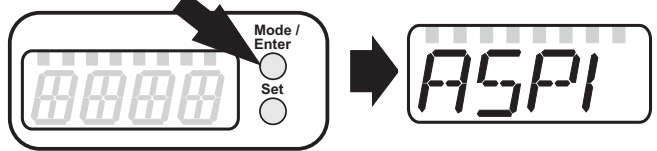
<p>1</p>	<p>Parameter selection</p> <ul style="list-style-type: none"> ▶ Press [Mode/Enter] until the requested parameter is displayed. 	
<p>2</p>	<p>Setting of the parameter value</p> <ul style="list-style-type: none"> ▶ Press [Set] and keep it pressed. > Current setting value of the parameter flashes for 5 s. > After 5 s: The setting value is changed: incremental by pressing briefly or scrolling by holding pressed. 	
<p>Numerical values are incremented continuously. If the value is to be reduced: let the display move to the maximum setting value. Then the cycle starts again at the minimum setting value.</p>		
<p>3</p>	<p>Acknowledgement of the parameter value</p> <ul style="list-style-type: none"> ▶ Press [Mode/Enter] briefly. > The parameter is displayed again. The new setting value is stored. 	
<p>Setting of other parameters:</p> <ul style="list-style-type: none"> ▶ Start again with step 1. 		
<p>Finishing the parameter setting:</p> <ul style="list-style-type: none"> ▶ Press [Mode/Enter] several times until the current measured value is displayed or wait for 15 s. > The unit returns to the operating mode. 		



- Change from menu level 1 to menu level 2:
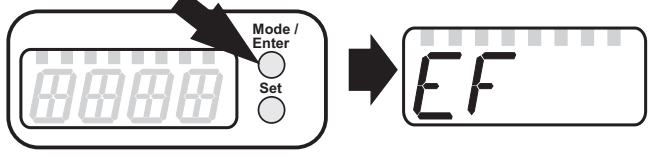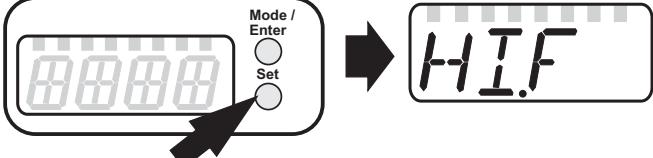
<ul style="list-style-type: none"> ▶ Press [Mode/Enter] until [EF] is displayed. 	
<ul style="list-style-type: none"> ▶ Press [Set] briefly. > The first parameter of the sub-menu is displayed (here: [HI.F]). 	

- Locking / unlocking

UK

The unit can be locked electronically to prevent unintentional wrong settings.
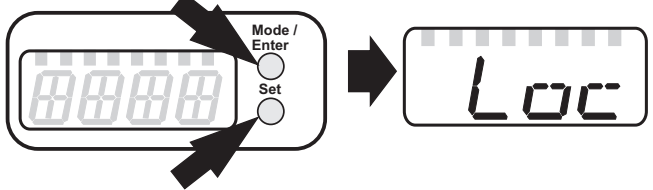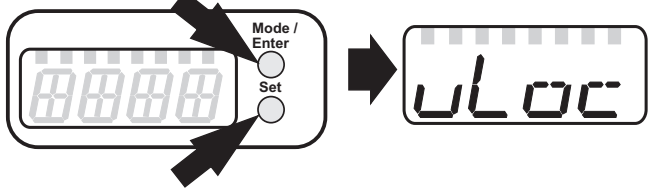
<ul style="list-style-type: none"> ▶ Make sure that the unit is in the normal operating mode. ▶ Press [Mode/Enter] + [Set] for 10 s. > [Loc] is displayed. 	
<p>During operation: > [Loc] is briefly displayed if you try to change parameter values.</p>	
<ul style="list-style-type: none"> ▶ Press [Mode/Enter] + [Set] for 10 s. > [uLoc] is displayed. 	

When delivered: unlocked.

- Time out:

If during parameter setting no pushbutton is pressed for 15 s, the unit exits the parameter setting mode. The parameter value is not changed.

9.2 Scaling of the analogue value for temperature

<ul style="list-style-type: none">▶ Select [ASP1] and set the value at which 4 mA is provided.▶ Select [AEP1] and set the value at which 20 mA is provided.	ASP 1 AEP 1
--	----------------

9.3 Scaling of the analogue value for volumetric flow

<ul style="list-style-type: none">▶ Select [ASP2] and set the value at which 4 mA is provided.▶ Select [AEP2] and set the value at which 20 mA is provided.	ASP2 AEP2
--	--------------

9.4 User settings (optional)

9.4.1 Determine the standard unit of measurement for volumetric flow

<ul style="list-style-type: none">▶ Select [Uni.F] and set the unit of measurement:: [Lmin], [m3h], [GPm] or [GPh].	Uni.F
---	-------

9.4.2 Determine the standard unit of measurement for temperature

<ul style="list-style-type: none">▶ Select [Uni.T] and set the unit of measurement: [°C] or [°F].	Uni.T
---	-------


9.4.3 Configuration of the standard display

<ul style="list-style-type: none">▶ Select [SELd] and determine the standard process category.<ul style="list-style-type: none">- [FLOW] = display shows the current volumetric flow value in the standard unit of measurement.- [TEMP] = display indicates the current medium temperature in the standard unit of measurement.▶ Select [diS] and determine the update rate and orientation of the display:<ul style="list-style-type: none">- [d1] = update of the measured values every 50 ms.- [d2] = update of the measured values every 200 ms.- [d3] = update of the measured values every 600 ms.- [rd1], [rd2], [rd3] = display as for d1, d2, d3; rotated by 180°.- [OFF] = the display is switched off in the operating mode.	SELd diS
---	-------------

9.4.4 Setting the damping of the measured values

<ul style="list-style-type: none">▶ Select [dAP] and the damping constant in seconds (t value 63 %).	dAP
--	-----


9.4.5 Setting the error behaviour of OUT1 / OUT2

<ul style="list-style-type: none">▶ Select [FOU1] and determine the value:<ul style="list-style-type: none">- [On] = the analogue signal goes to the upper end stop value.- [OFF] = the analogue signal goes to the lower end stop value.- [OU] = the analogue signal corresponds to the measured value.▶ Select [FOU2] and determine the value:<ul style="list-style-type: none">- [On] = the analogue signal goes to the upper end stop value.- [OFF] = the analogue signal goes to the lower end stop value.- [OU] = the analogue signal corresponds to the measured value.	
---	---


9.5 Service functions

UK


9.5.1 Reading the min./max. values for volumetric flow

<ul style="list-style-type: none">▶ Select [HI.F] or [LO.F] and press [Set] briefly. [HI.F] = maximum value, [LO.F] = minimum value. Delete memory: <ul style="list-style-type: none">▶ Select [HI.F] or [LO.F].▶ Press [Set] and keep it pressed until [----] is displayed.▶ Press [Mode/Enter] briefly. It makes sense to delete the memories as soon as the unit works under normal operating conditions for the first time.	
---	---

9.5.2 Reading the min./max. values for temperature

<ul style="list-style-type: none">▶ Select [HI.T] or [LO.T] and press [Set] briefly. [HI.T] = maximum value, [LO.T] = minimum value. Speicher löschen: <ul style="list-style-type: none">▶ Select [HI.T] or [LO.T].▶ Press [Set] and keep it pressed until [----] is displayed.▶ Press [Mode/Enter] briefly. It makes sense to delete the memories as soon as the unit works under normal operating conditions for the first time.	
--	---

9.5.3 Reset all parameters to the factory setting

<ul style="list-style-type: none">▶ Select [rES], then press [Set] and keep it pressed until [----] is displayed.▶ Press [Mode/Enter] briefly. The factory setting is listed at the end of the instructions (→ 12 Factory setting). It makes sense to write your own settings in this table before executing the function.	
--	---

10 Operation

After power on and expiry of the power-on delay time (approx. 5 s) the unit is in the Run mode (= normal operating mode). It carries out its measurement and evaluation functions and generates output signals according to the set parameters.

- Operation indication → 7 Operating and display elements.
- The output signals are at the maximum value during the power-on delay time.

10.1 Read the set parameters

- ▶ Press [Mode/Enter] until the requested parameter is displayed.
- ▶ Press [Set] briefly.
- > The unit displays the corresponding parameter value for approx. 15 s. After another 15 s the parameter is displayed again, then the unit returns to the Run mode.

10.2 Changing the display unit in the Run mode

- ▶ Press [Set] briefly in the Run mode. Press the pushbutton to move to the next display unit.
- > The unit displays the current measured value for approx. 15 s, the corresponding LED lights.

2 groups of display units are accessible (depending on the setting of the parameters [SELd] and [Uni.F] and [Uni.T]):

- [Lmin], [m3h] and the temperature unit selected in [Uni.T].
- [GPm], [GPh] and the temperature unit selected in [Uni.T].

When setting [SELd] = [FLOW], [Uni.F] = [Lmin] and [Uni.T] = [°C], for example, [Lmin] is displayed as a standard. By pressing [Set] the display unit changes to [m3h], [°C] and back to [lmin].

10.3 Error indication

[OL]	Detection zone of volumetric flow or temperature exceeded: measured value between 120 % and 130 % of VMR.
[UL]	Below the detection zone of volumetric flow or temperature: measured value between -120 % and -130 % of VMR.
[Err]	- Unit faulty / malfunction. - Measured value greater than 130 % of VMR or smaller than -130 % of VMR.
[Loc]	Setting pushbuttons locked, parameter change rejected.

VMR = final value of the measuring range

UK

11 Technical data and scale drawing

Technical data and scale drawing at www.ifm.com → Data sheet search → Enter the article number.

12 Factory setting

	Factory setting			User setting
	SM6004	SM7004	SM8004	
ASP1	-20.0	-20.0	-20.0	
AEP1	80.0	80.0	80.0	
ASP2	0.0	0.0	0.0	
AEP2	25.0	50.0	100.0	
FOU1	OFF	OFF	OFF	
FOU2	OFF	OFF	OFF	
dAP	3	3	3	
diS	d2	d2	d2	
Uni.F	Lmin	Lmin	Lmin	
Uni.T	°C	°C	°C	
SELd	FLOW	FLOW	FLOW	